


10. Schematic Diagram

10-1 MAIN


10-1-1 MAIN 1

This Document can not be used without Samsung's authorization.



















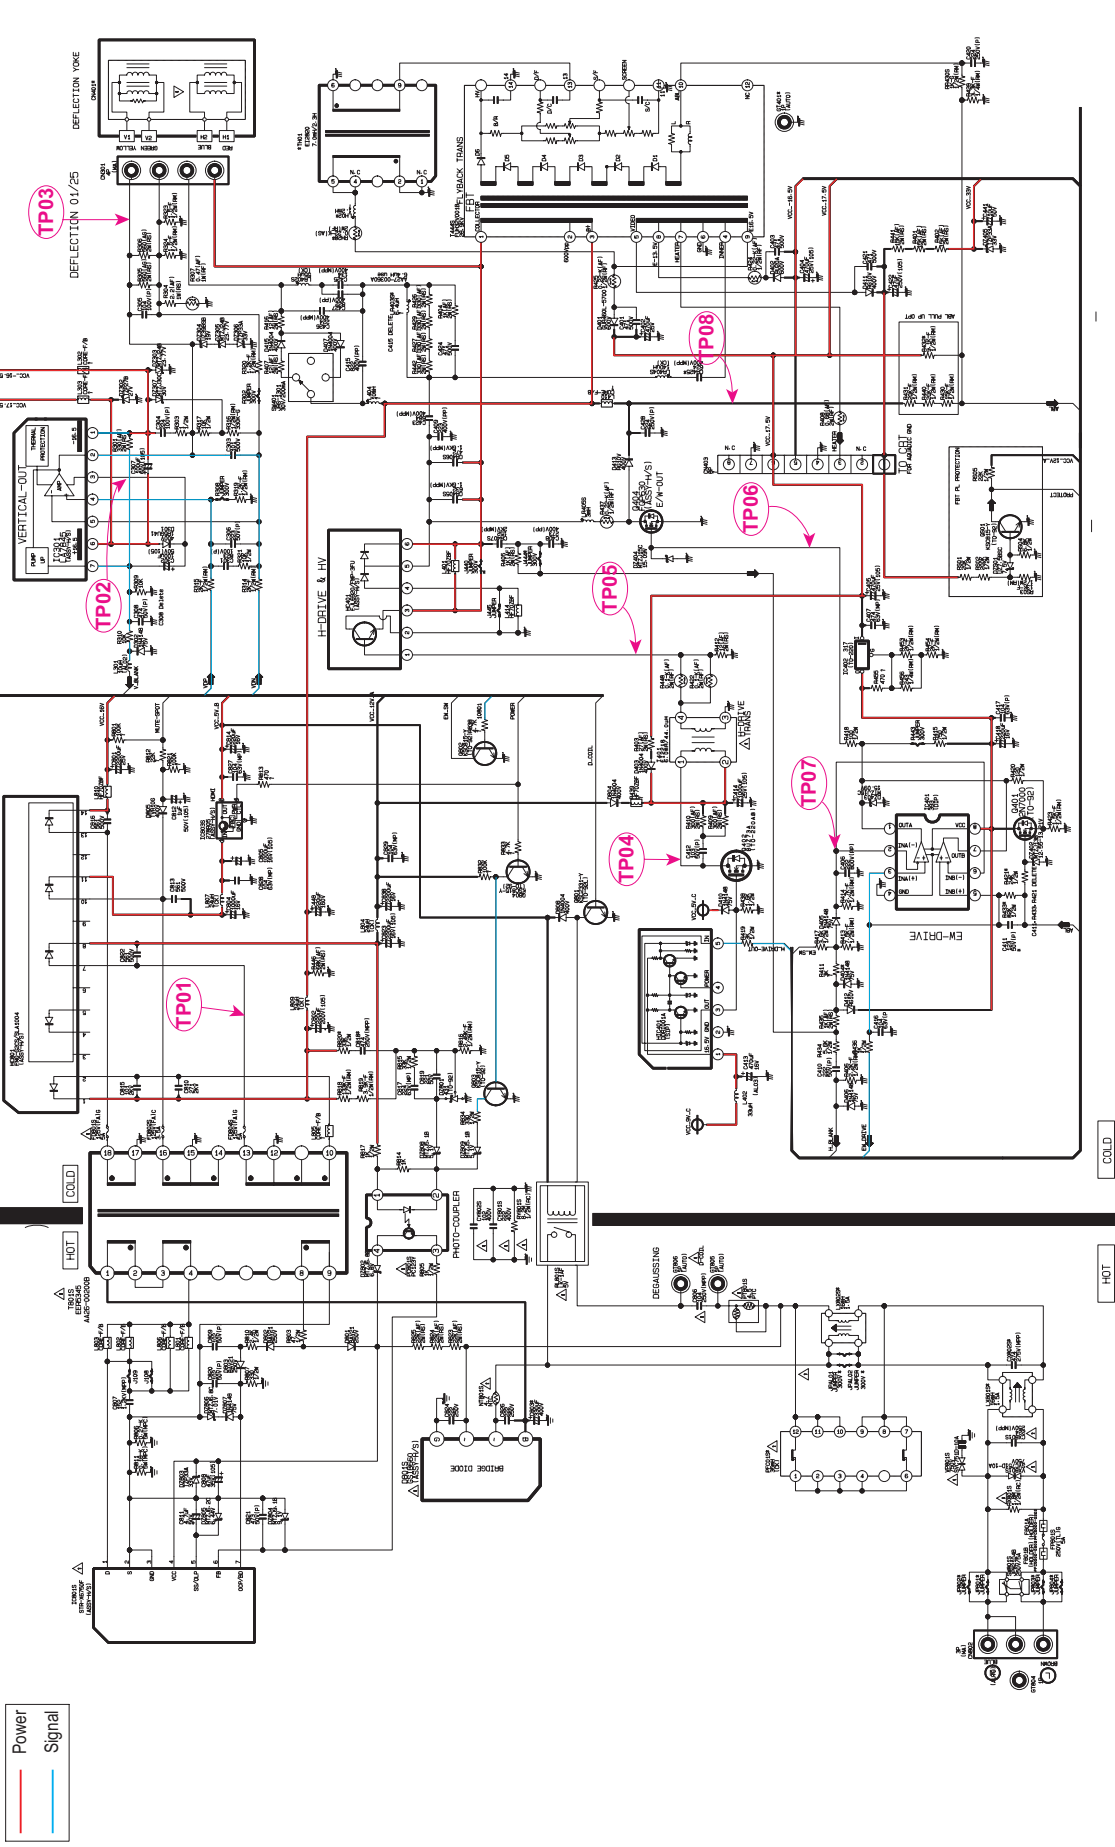


10-1-2 MAIN 2

This Document can not be used without Samsung's authorization.

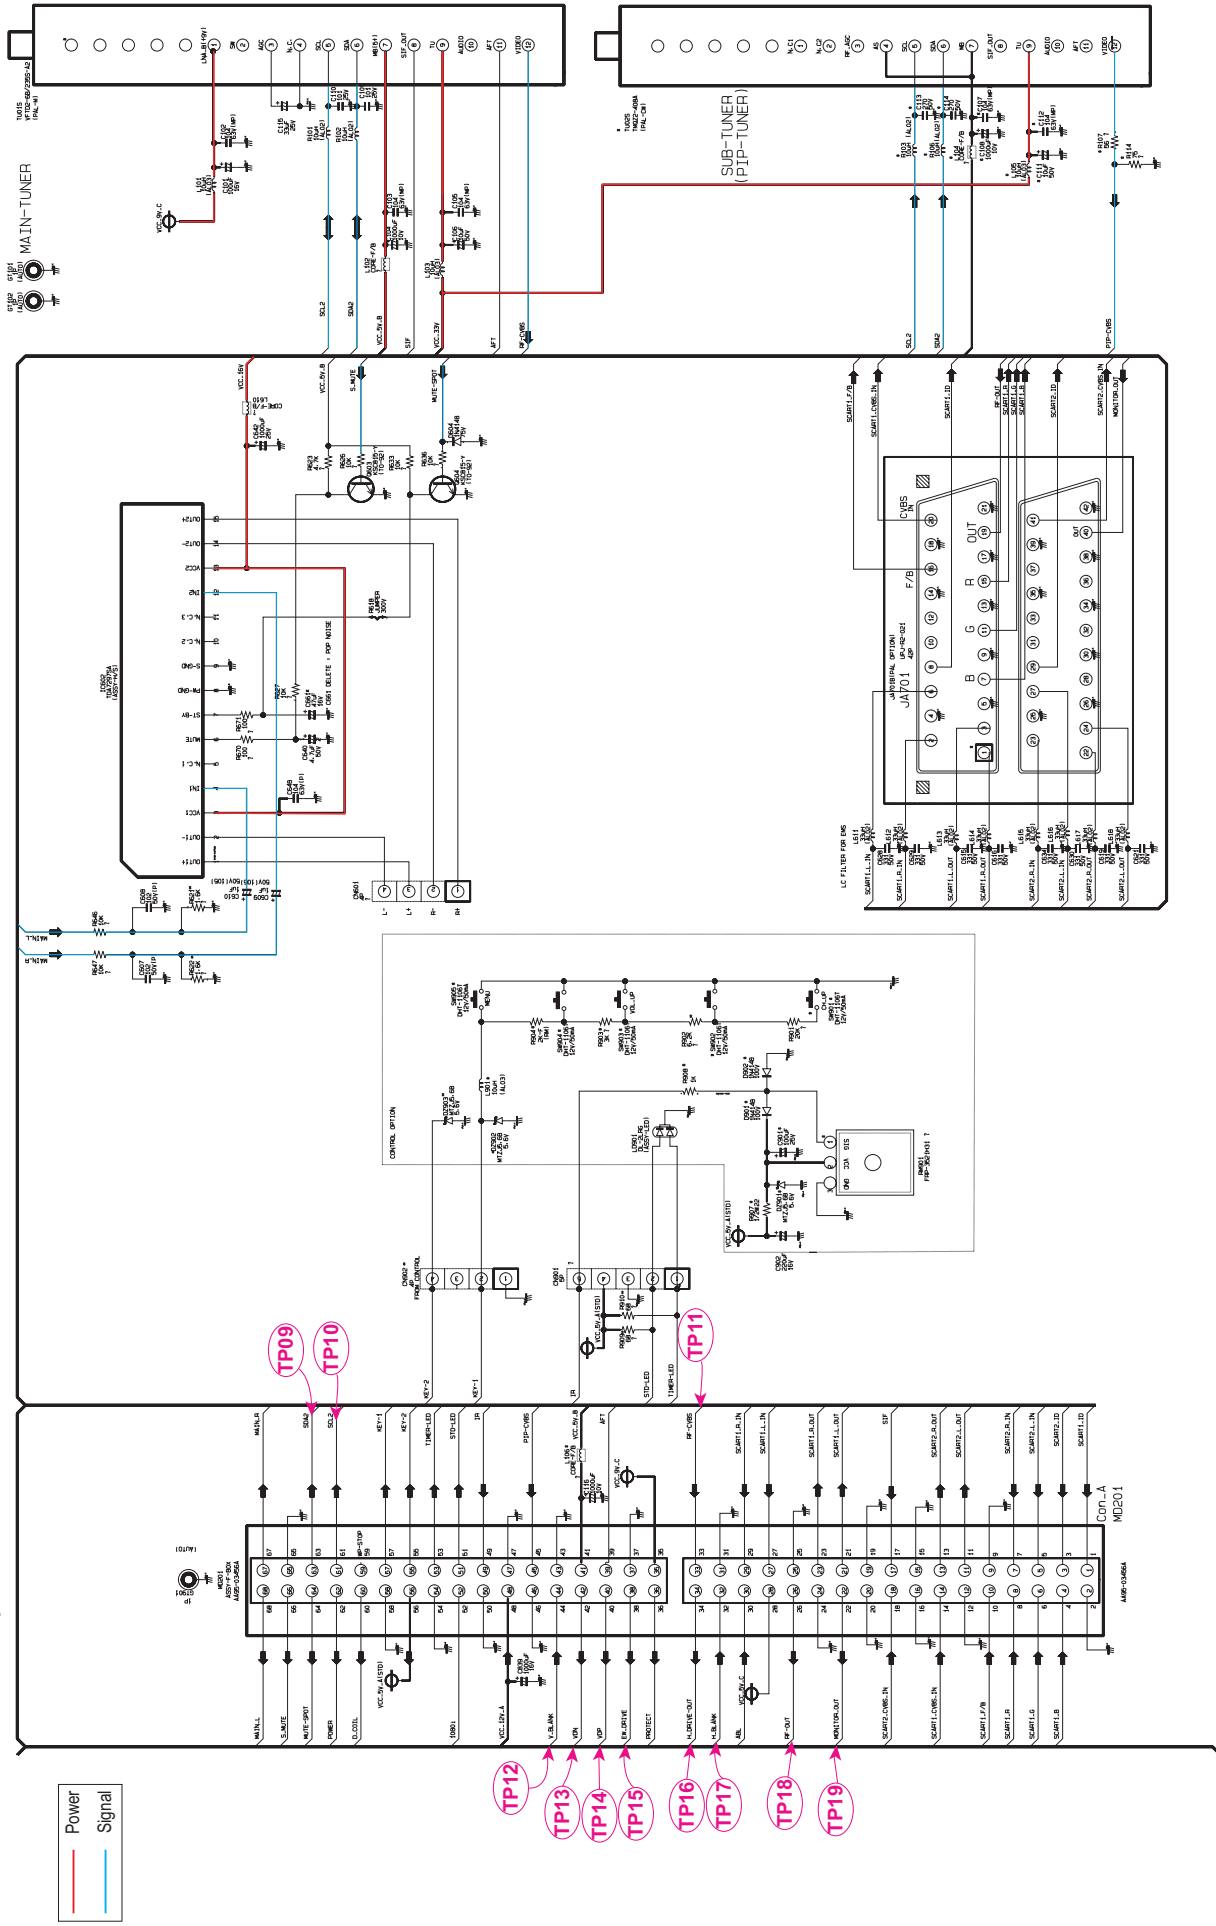


WAVEFORM

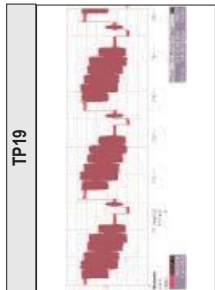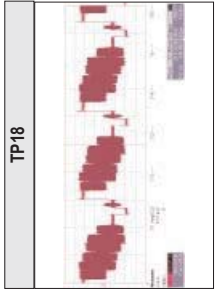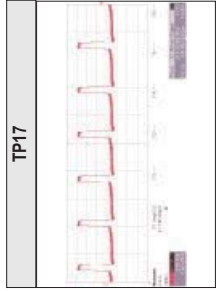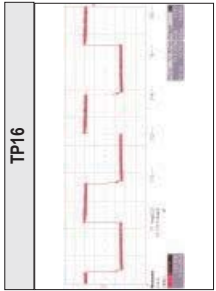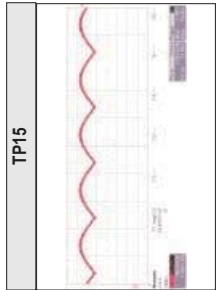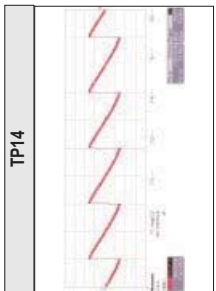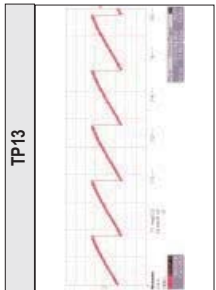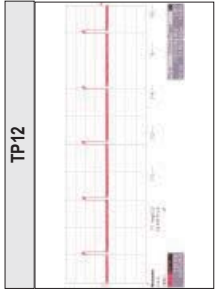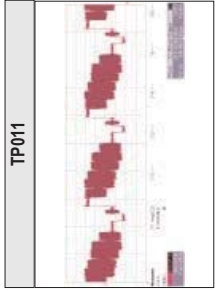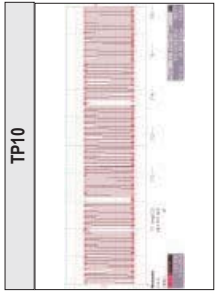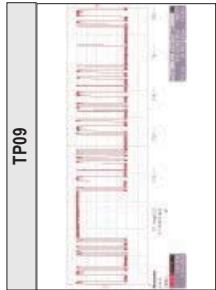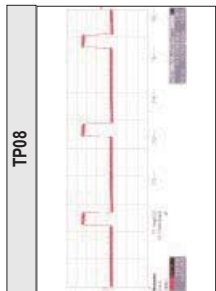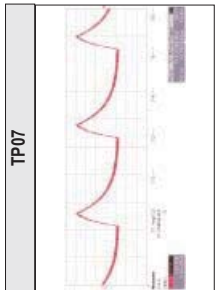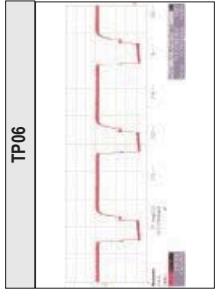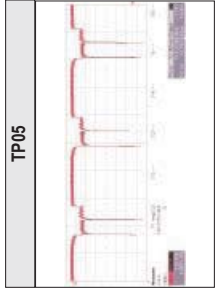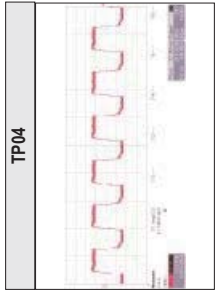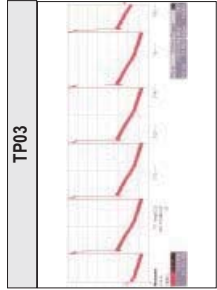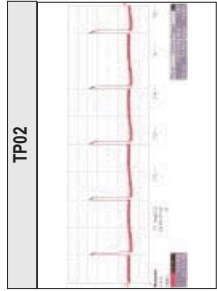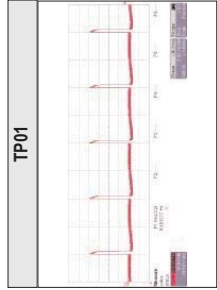



10-2 Feature Box
10-2-1 Feature Box 1

This Document can not be used without Samsung's authorization.


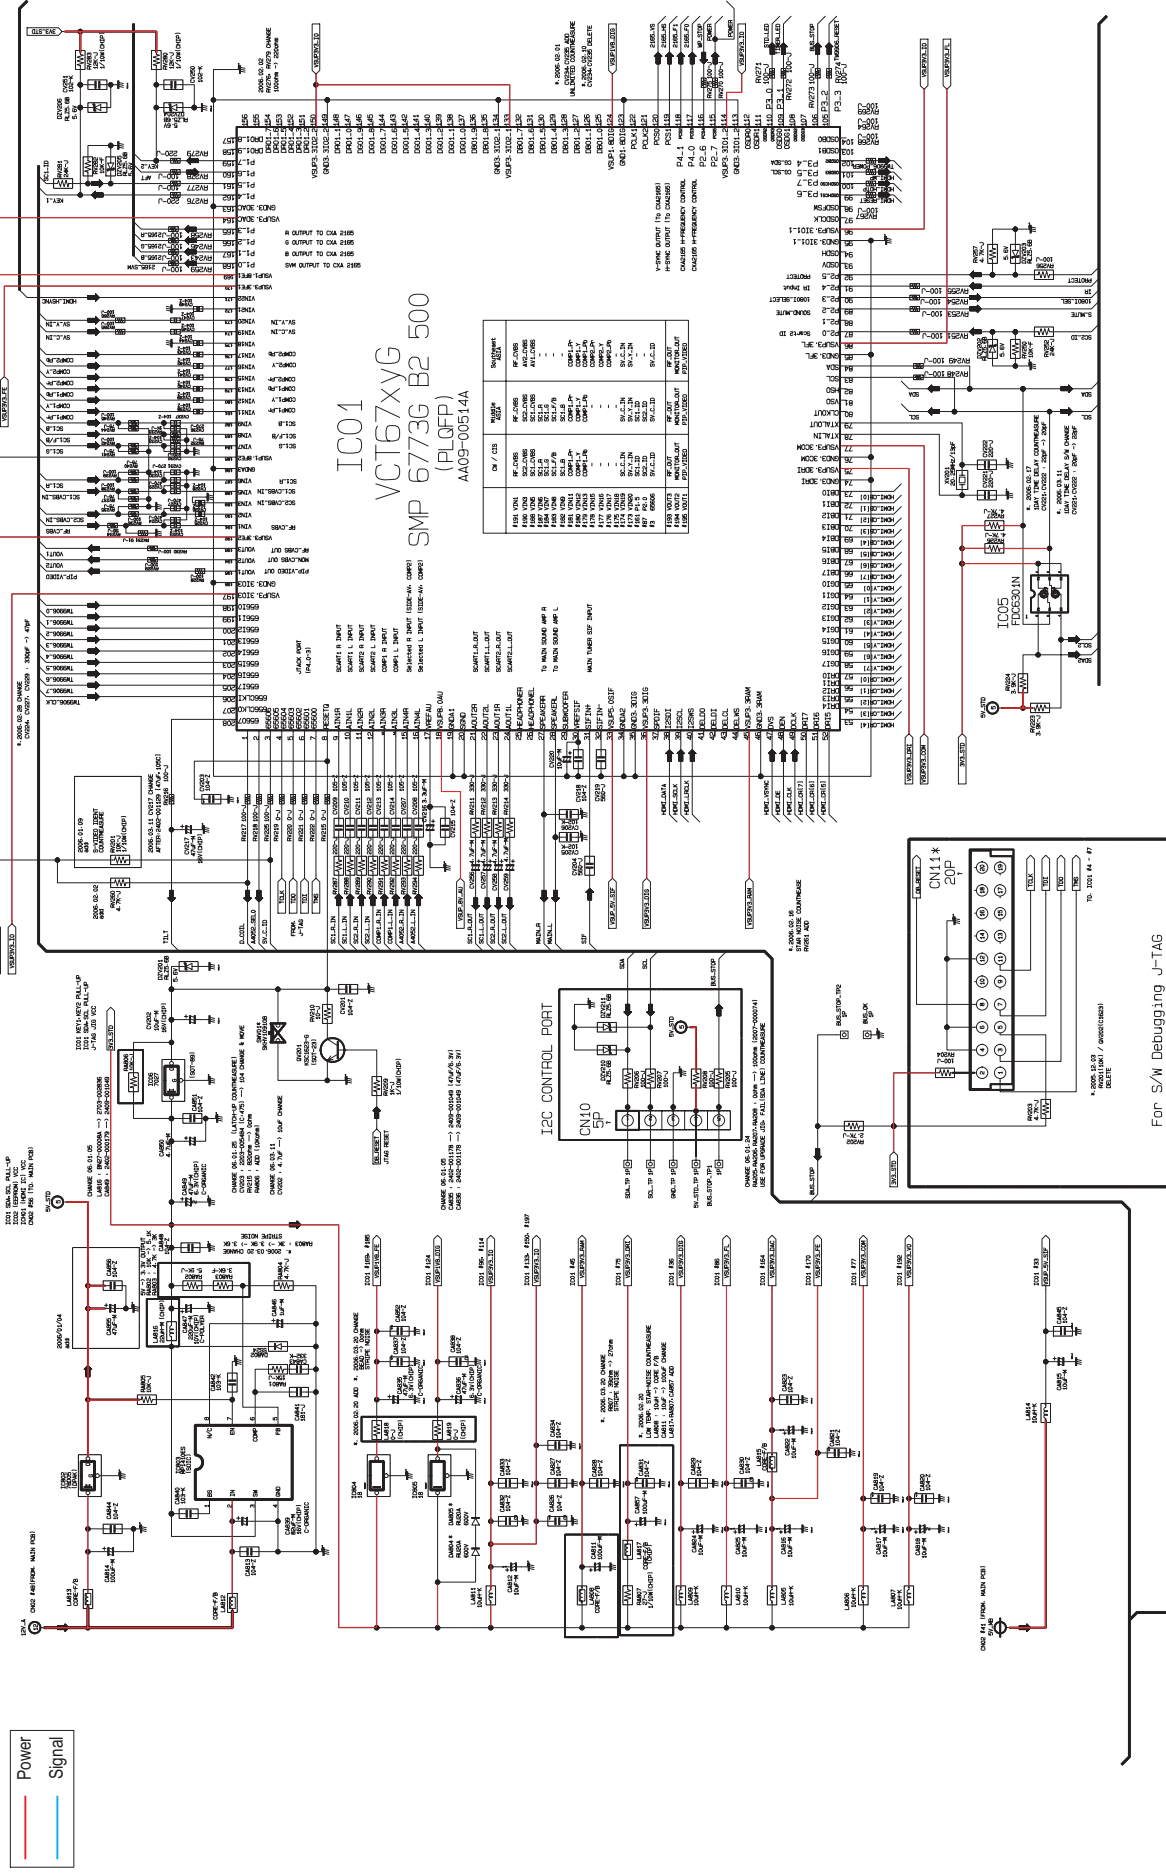


10-2-2 Feature Box 2

This Document can not be used without Samsung's authorization.

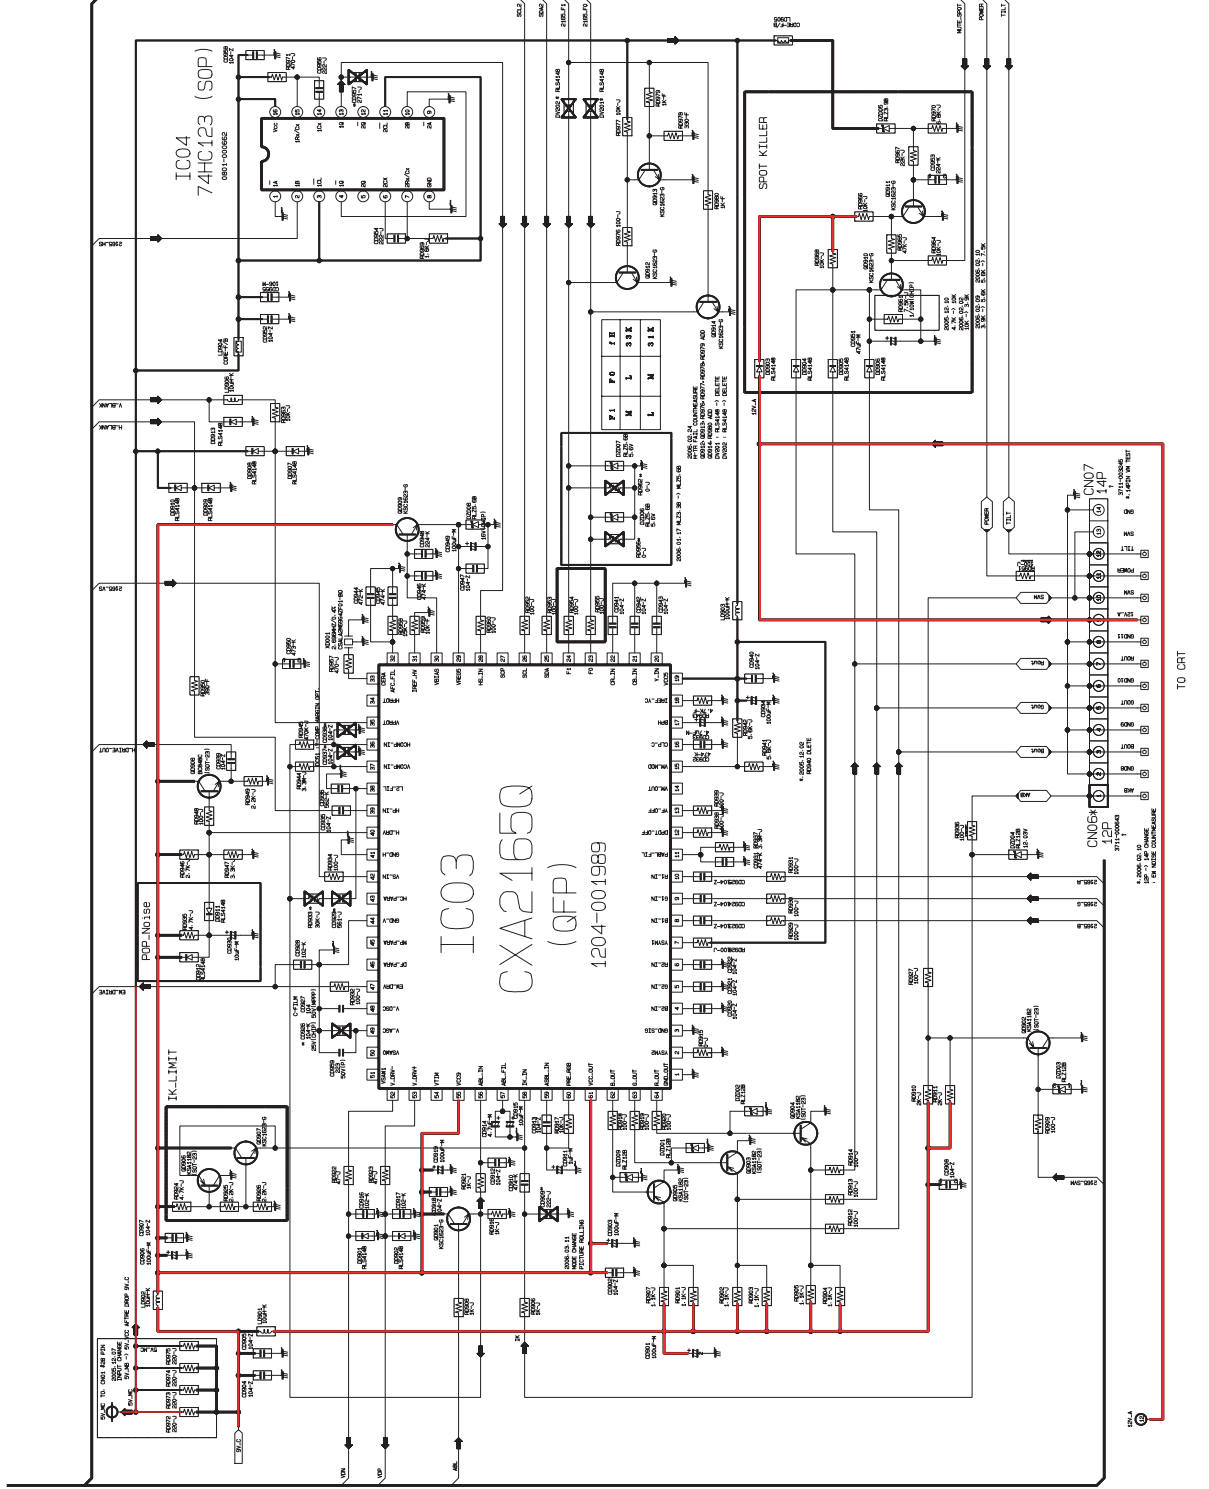


SIDE-A/V

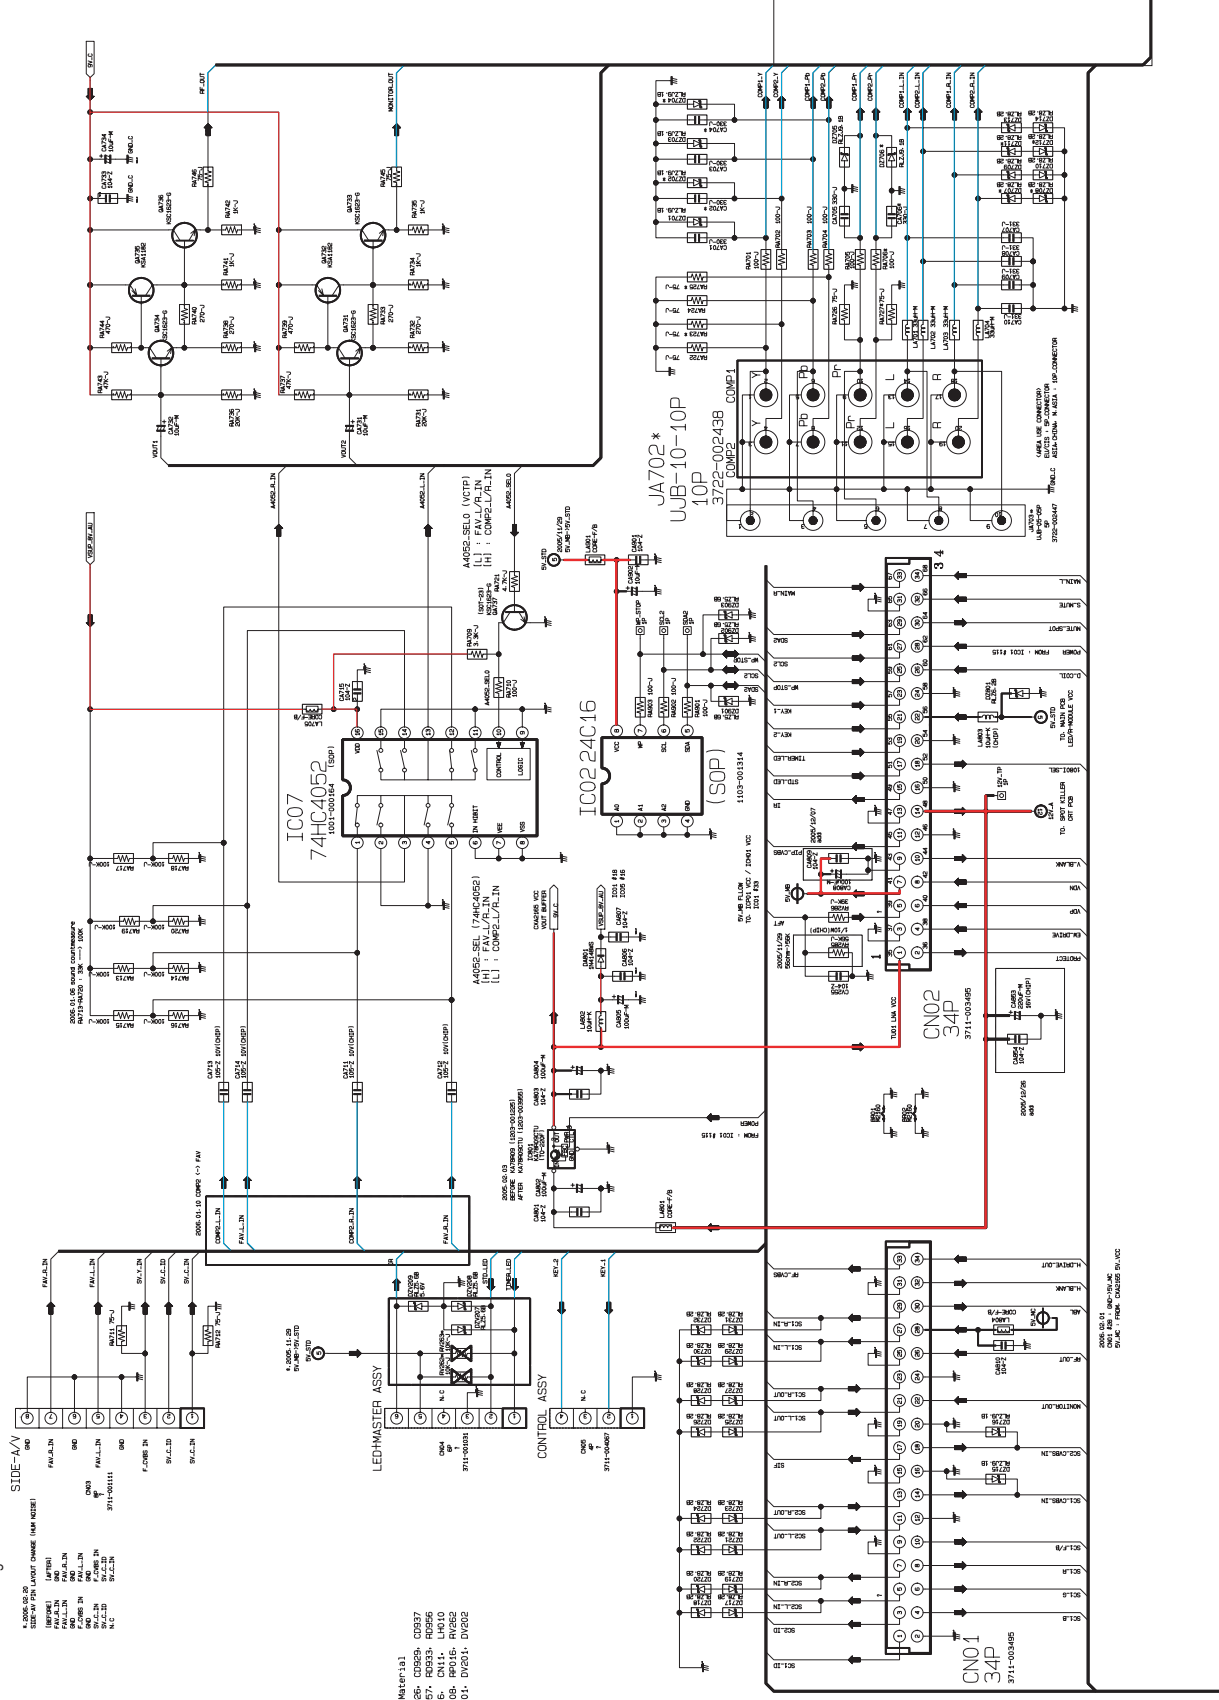


10-2-5 Feature Box 5

This Document can not be used without Samsung's authorization.

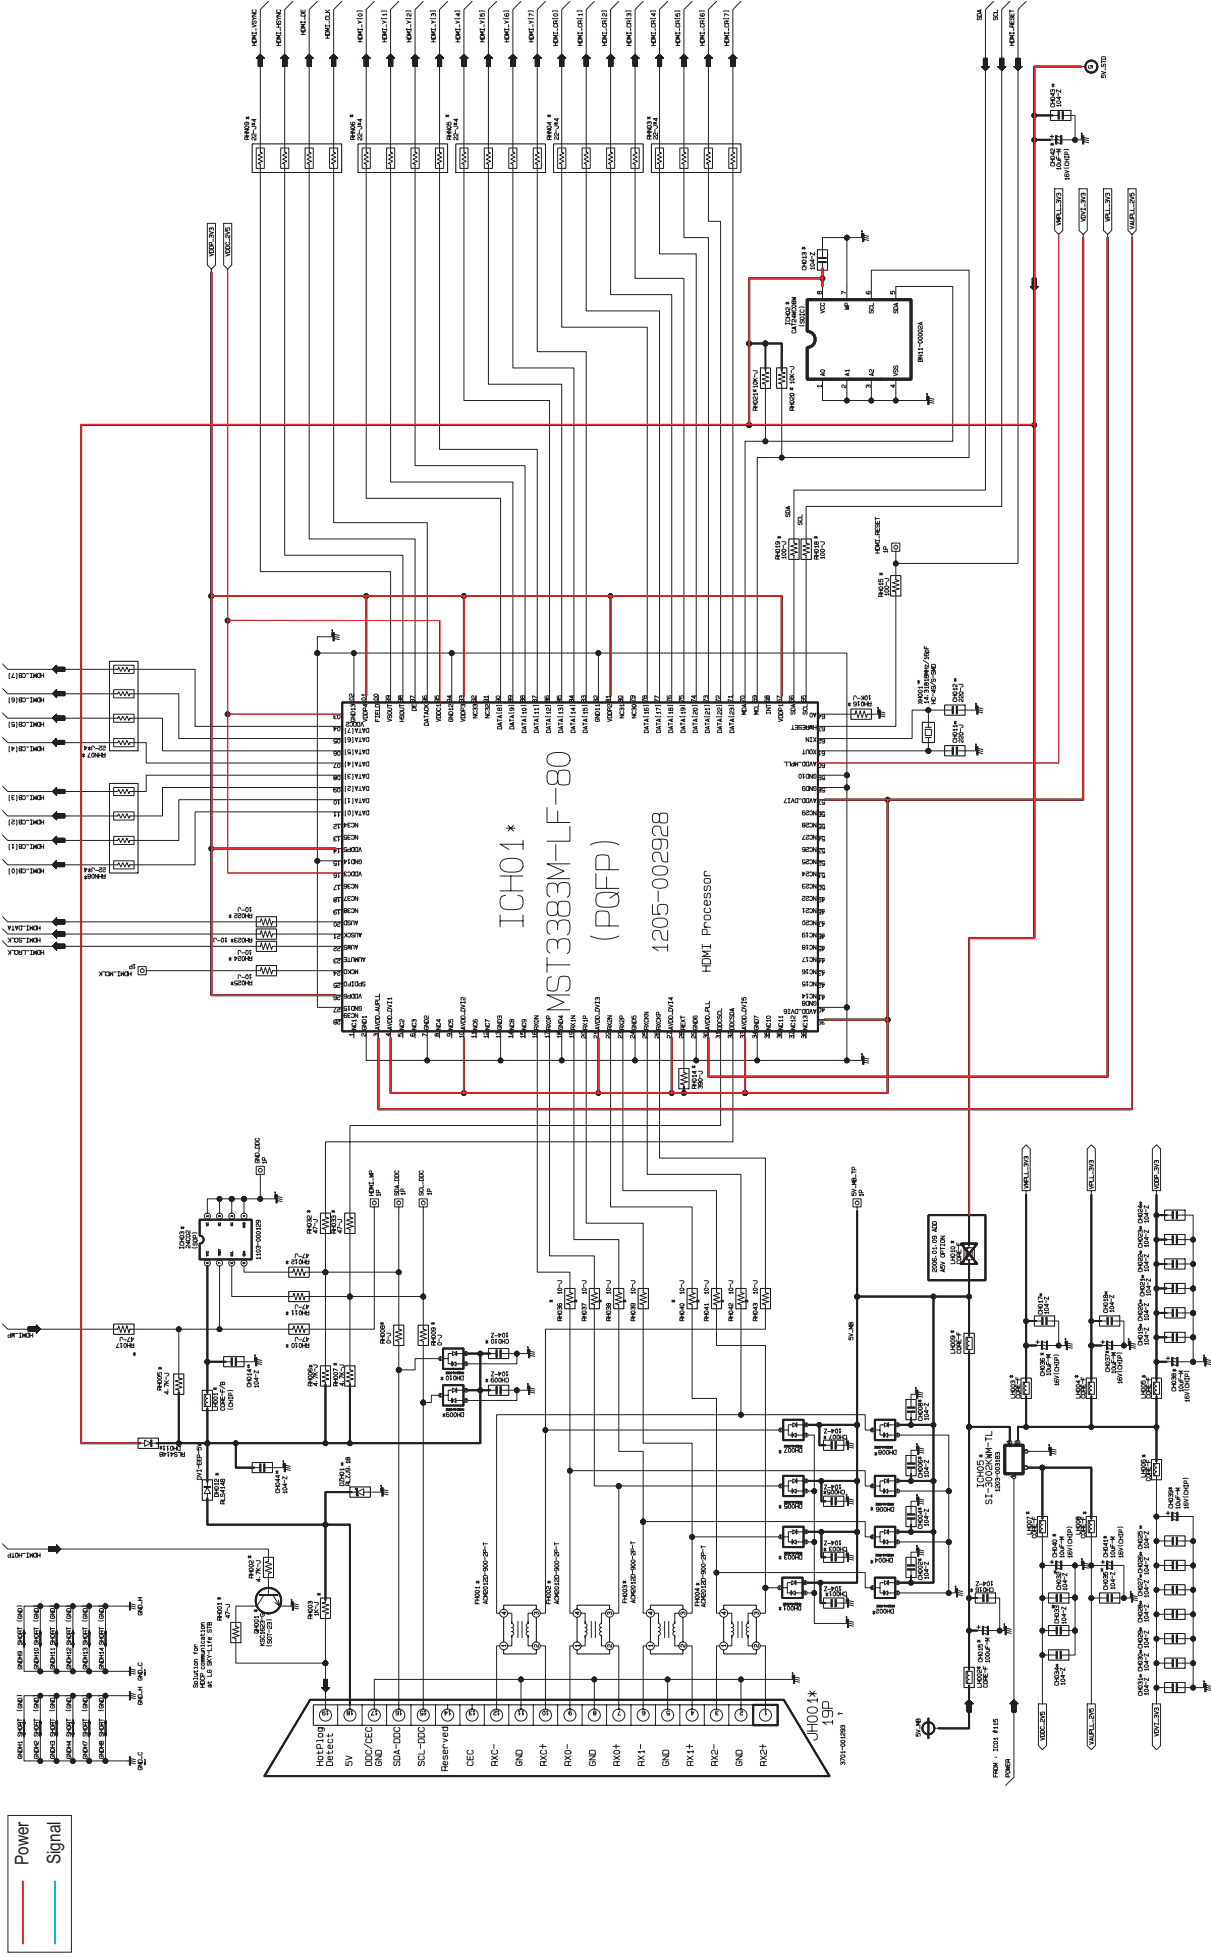

10-4 AV

This Document can not be used without Samsung's authorization.

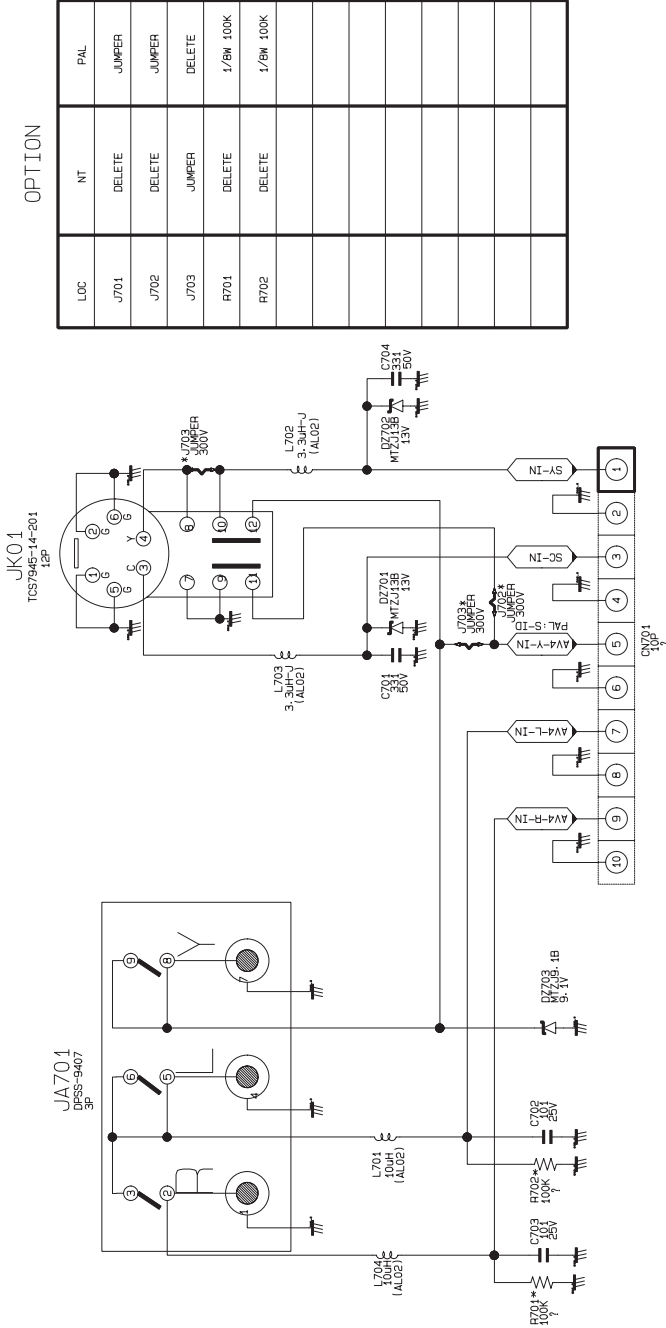

OPTION

LOC	NT	PAL
J701	DELETE	JUMPER
J702	DELETE	JUMPER
J703	JUMPER	DELETE
R701	DELETE	1/8W 100K
R702	DELETE	1/8W 100K

10-5 CONTROL

This Document can not be used without Samsung's authorization.

